

5VB Parts List

325274P01	MOTOR
11853	CLAMP ASSEMBLY
12660	SUPPORT ARM
325388p01	BASE
325294P01	HOUSING
314516	KNOB
310874	PROPELLER
310983	CHUCK - STEEL
325314P01	CJUCK KEY
311024	ADAPTOR CHUCK - 316SS
311039-1	SHAFT - 12"
311039-2	SHAFT- 18"
311039-3	SHAFT - 24"
327003P2	BRUSHES (SET)
330105	FUSE HOLDER
330106P1	FUSE - 1 AMP
330185	SPEED CONTROL